

# DEPOCAM 20.0 Installation

# DEPOCAM

# Table of Contents

1	Before you start the installation .....	2
1.1	Recommended backups .....	2
2	Software Installation .....	3
3	Programing the license code on the dongle .....	6

## 1 Before you start the installation

A dongle is required to license the software. You received this dongle from your supplier. The license code that is saved on the dongle unlocks the software and the options (**Catia V4, Catia V5, UG-NX, Granite, Parasolid, SolidWorks, 5-axis, Simulation, Inspect**).

The installation procedure is described in the section **Installation of DEPOCAM**.

### 1.1 Recommended backups

Before installing **DEPOCAM v20**, we recommend creating a **backup of your existing tool libraries**.

#### Example of a backup folder:

X:\xxxxxxx\Backup\_ToolLibraries\V19

Copy the tool libraries from their current location to this folder.

After installing **DEPOCAM v20**, you can add the libraries again as usual via

**Start > Libraries > Tool libraries** from their original path and continue working with them.

We also recommend backing up the **list of recently used tools**.

The corresponding file is located in the **program data folder**. By default, this is:

C:\ProgramData\NCGCAM Solutions\NCGCAM\MRU-xxxUSERxxx.tdb


Copy this **MRU.tdb** file to a safe location as well.

Please note: When **working in parallel with an older version** (e.g. **v19**) and the **new version v20**, the list of recently used tools will be **reset**.


## 2 Installation of DEPOCAM

The installation of the DEPOCAM software on a single-user computer is described below.


- Start the installation file **DEPOCAM20.0.nnnmmx64.exe**, which you downloaded from our homepage, or received from us via USB stick with a double click (nn-mmm are the respective release numbers of version 20.0).
- If you do not want to install DEPOCAM on drive C, you can select a different drive for the installation in the following dialog:

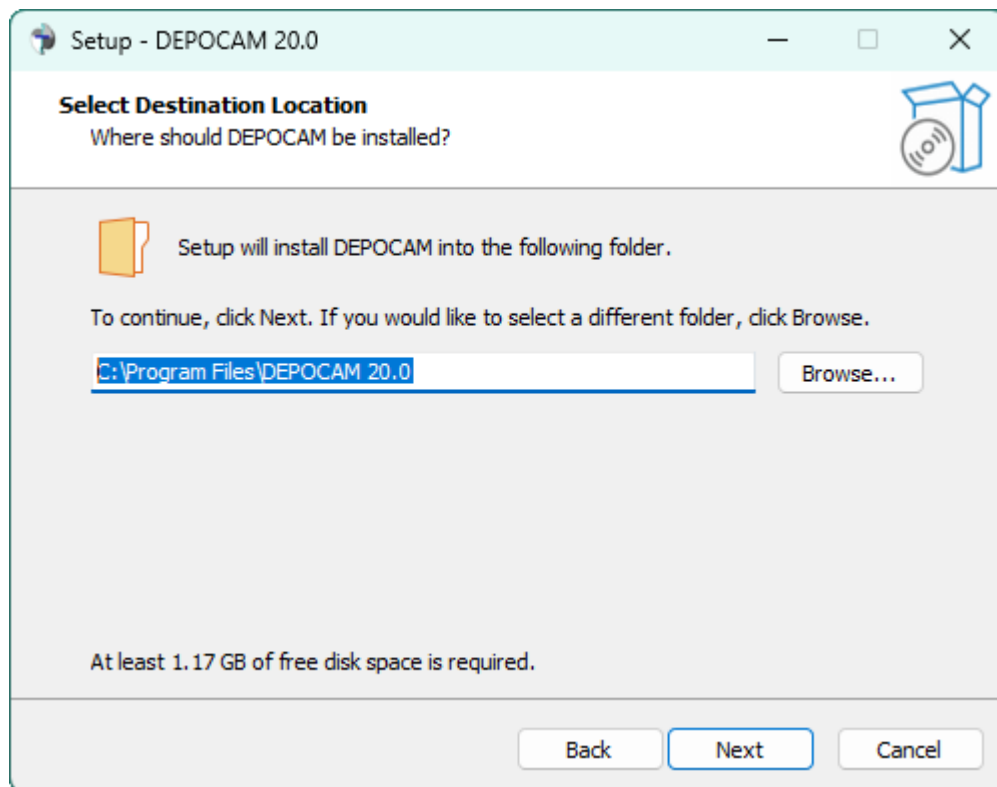

Click with the mouse on **Browse...** and select the desired drive and folder.

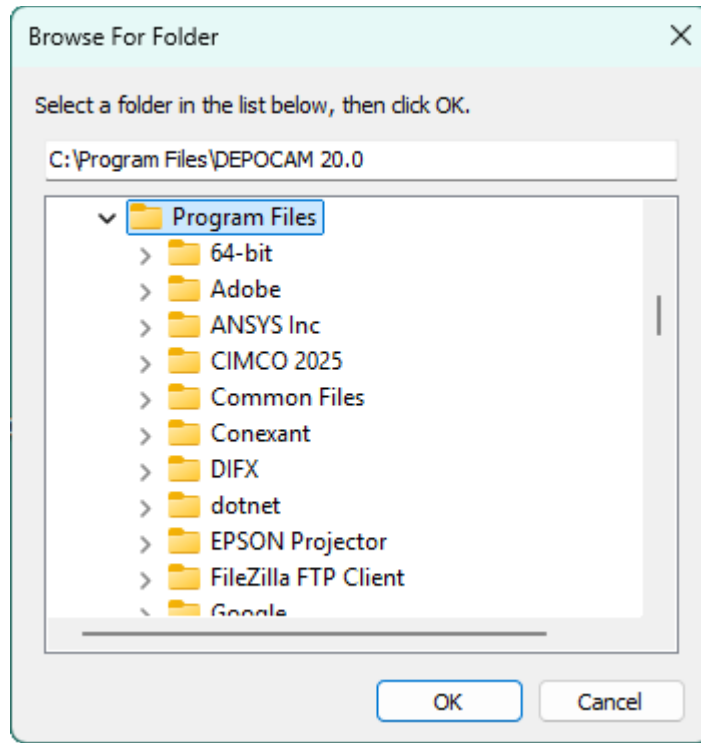

- Follow the installation instructions up to the dialog **Select Components**.

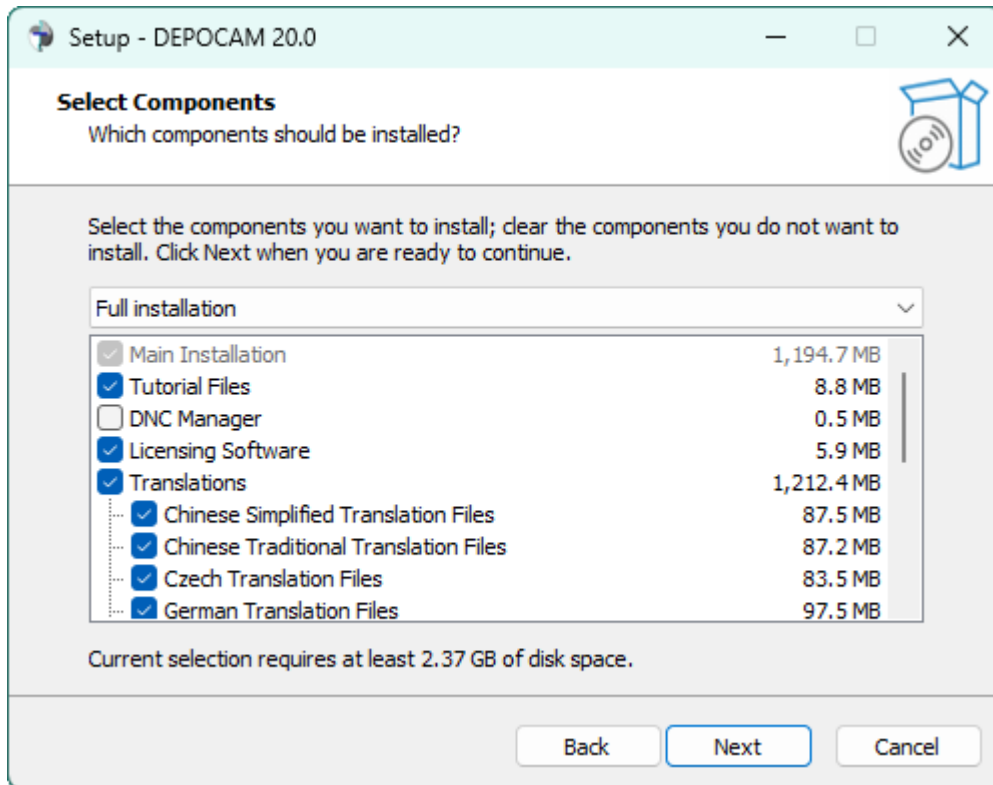

In any case, make sure that the **Licensing software** option is activated. Otherwise you cannot enter a license code for the dongle.

During the installation, the machine simulation translation file will be automatically installed based on your PC's country settings. If your PC's country setting does not match either German, Japanese or Turkish, the machine simulation will be installed in English by default.


- Continue the installation and follow the further instructions.
- Restart your computer after the installation if you are prompted to do so.

### 3 Programming the license code on the dongle


If you upgrade to a new DEPOCAM version, or purchase a new license, you will receive a new license code from us. This license code must be registered on your dongle.

The registration of the license code on your dongle is described below.


- Start the license manager which was installed with your DEPOCAM software. You can find it under **Start > Programs > DEPOCAM 20.0 > Licence Manager 20.0**.

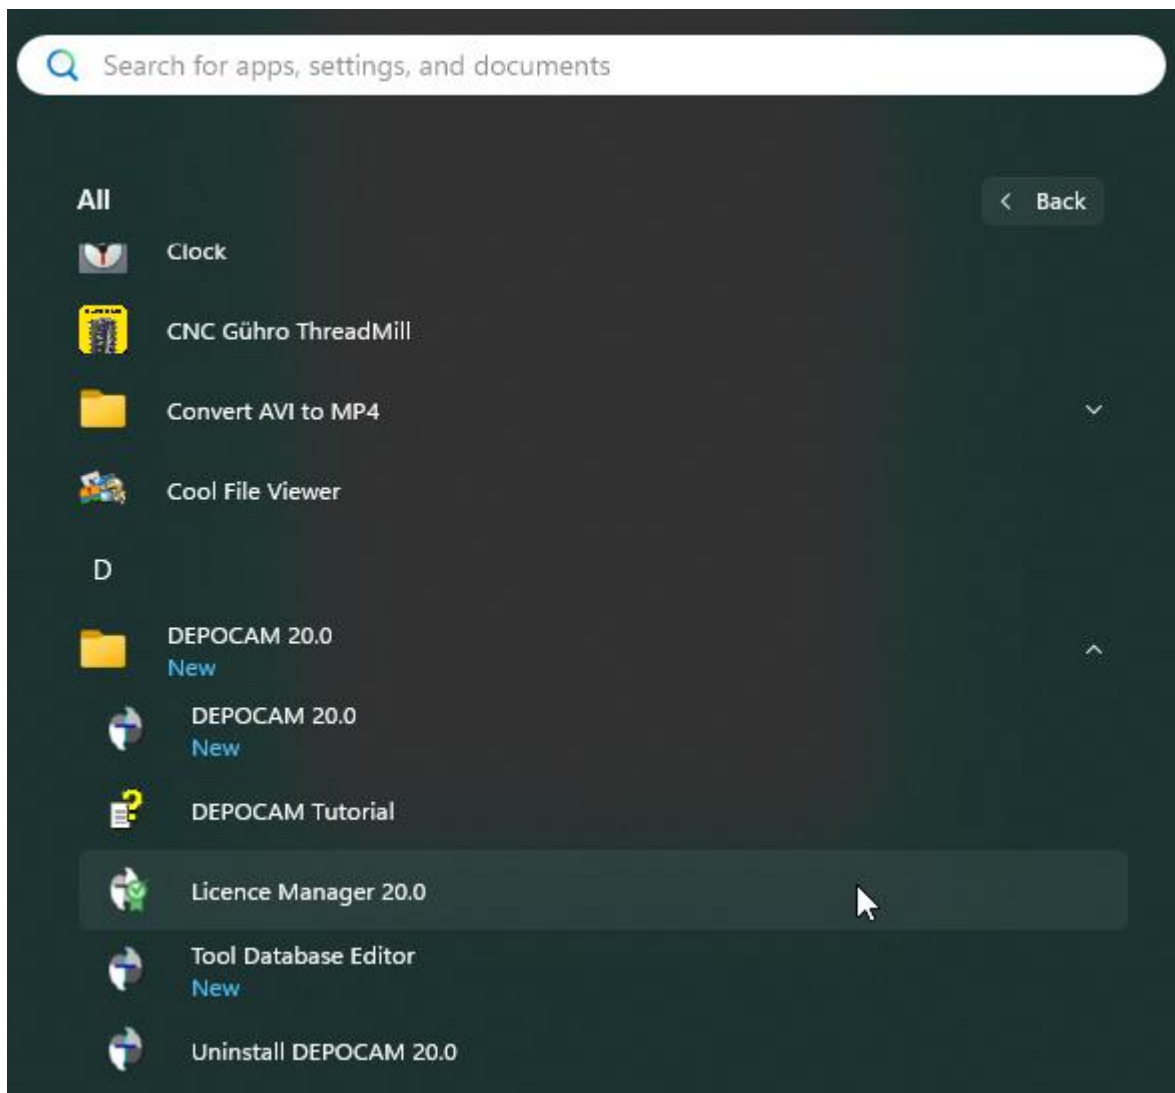

- Click on the **License...** field with the mouse,

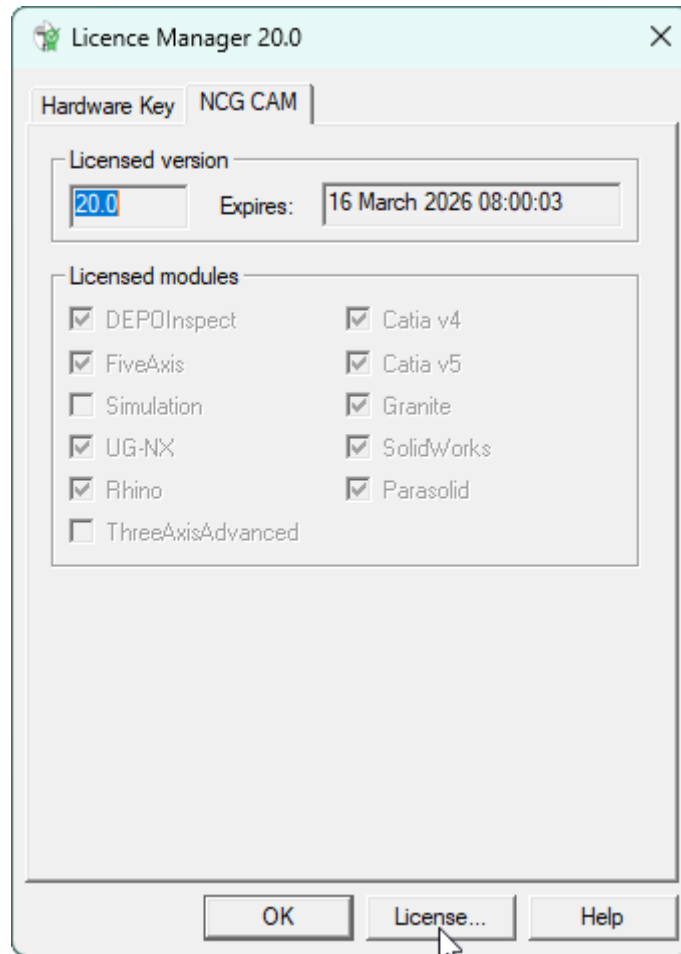


- and enter the licence code.

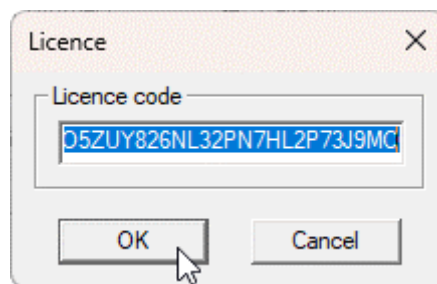

- After confirming with **OK**, the licence code is registered on the dongle. You can close the license manager and start the DEPOCAM software.

We hope that you could install DEPOCAM V20.0 quickly and easily with this description. Should you still have questions about the installation, don't hesitate to contact us.

Please contact:

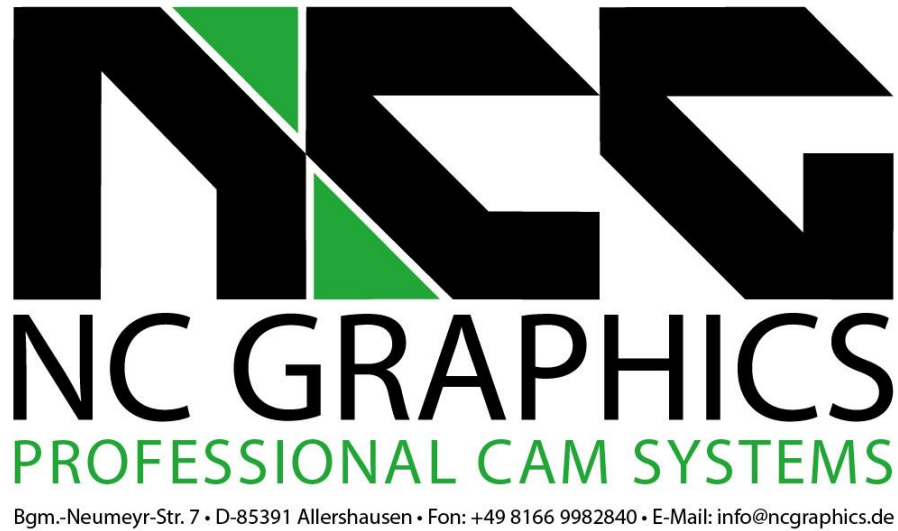

Your contacts for questions about DEPOCAM are:

Thomas Gehlhaus, Frank Schuberth and Dieter Trinkner

Please send inquiries via email to: [support@ncgraphics.de](mailto:support@ncgraphics.de)